

Appendix 6
to the contract for the provision of services for
the organization of events at PGE Narodowe

PROCEDURE FOR ENTERING THE P0 LEVEL - TURNSTILE LEVEL

Movement of any vehicles on the P0 (turnstile) level is possible only in justified situations, when transport by freight elevators is not possible. Any entry to P0 level must be notified and approved by PL.2012+ staff. Details of the planned assembly must be agreed with the Event or Sales Manager and the possibility of entry must be confirmed by presenting:

- method of importing the item,
- The actual parameters of the vehicle (dimensions, t/axle load),
- type, including the weight and size of the elements to be brought in (there is a limitation on the size of doors and panic wickets through which the transport is carried out, as well as restrictions on the bearing capacity of the substrate).

Restrictions on vehicles traveling on the P0 level:

- The permissible actual gross vehicle weight is 3.5 t (up to 1.75 t/axle)*. If the vehicle exceeds the limit, it will not be allowed into the P0 level.
- movement on the fire road (level -1) and the turnstile level (level 0) is allowed at a speed of up to 10 km/h.
- When moving along the fire road due to the people moving in these areas (level -1-pedestrian walkway) and the level of the turnstiles (level 0-pedestrian walkway), special care must be taken.

*Security officers are authorized to control the weight of vehicles traveling on the PGE National site using an on-board scale. Confirmation of the control shall be a printout from the on-board scales retained by the security officer in case of exceeding the permissible total weight of a given vehicle. The printout from the on-board scales confirming that the permissible axle load of the vehicle has not been exceeded is presented by the driver at the entrance ramp to level P0 and is retained by the controlling officer.

Accreditation procedure


- You should prepare an accreditation list and send it to the Event Manager no later than 24 h before the event - indicating the vehicles that are to drive up to the P0 level, the type of vehicle, make and t/car load.
- The accreditation list should include the names of persons and vehicle registration numbers, the scope of work and the coordinating person.
- The actual entrance gate for assembly/disassembly is Gate 7.
- Each vehicle entering through Gate 7 must be inspected-the driver is asked to open the trunk to record the property being brought in/out at the

PGE National grounds. If there is any doubt about the actual weight of the vehicle, the vehicle will be inspected for axle load.

- After checking the trunk, go to the Pass Office, located in close proximity to Gate 7, and present the car's documents, confirming the tonnage.
- You must show your entry card or download a free entry card (only those registered in advance by the organizer) and a mounting band. The entry card should be placed behind the windshield, and the mounting band should be worn on the wrist.
- During assembly/disassembly, each employee is required to wear a wrist band and the assembly/entry card behind the glass.
- After the installation/disassembly is completed, cars must leave the PGE National site, return the PGE National entry card to the Pass Office, unless otherwise agreed.
- The entrance to the P0 level - the level of the turnstiles is used only for the purpose of unloading / loading of materials / components necessary for the purpose of carrying out the assembly / disassembly associated with the organized event.

Access:

There are two driveways to the turnstile level. Marked on the map.

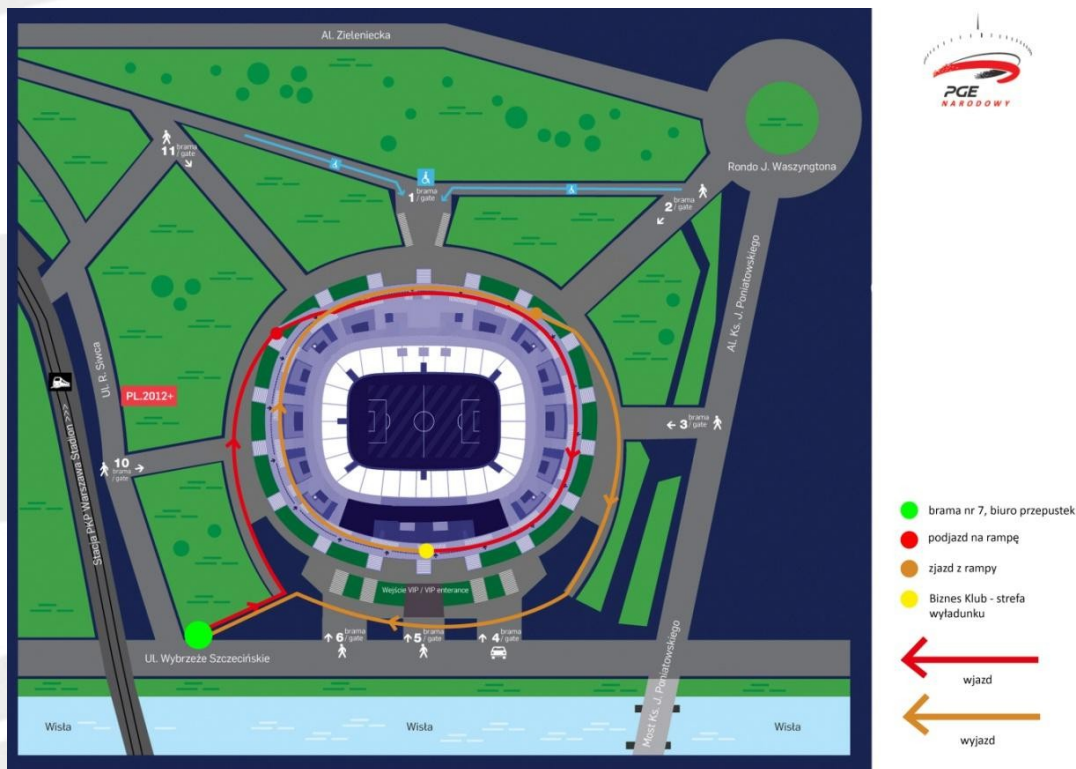

SIGNATURE AND NAME STAMP OF THE CLIENT:
